

| Tool Model | Part NO | Part Code | Description |
|------------|---------|-----------|---------------------------|
| EC-30A | | EC12397 | MANUAL EC-30A |
| EC-30A | 1 | KK13173 | TENSION SPRING 3173 |
| EC-30A | 2 | JJ10003 | E-RING 2.3 |
| EC-30A | 6 | EC11890 | SUB FRAME L-3B |
| EC-30A | 7 | EC11897 | RESET LEVER 3B |
| EC-30A | 8 | KK13171 | TENSION SPRING 3171 |
| EC-30A | 9 | KK13169 | TENSION SPRING 3169 |
| EC-30A | 10 | EC10979 | PF LEVER HOLDER 5 UNIT |
| EC-30A | 11 | AA21564 | SCREW 4X5 |
| EC-30A | 12 | EC11930 | MAIN SPRING 3B |
| EC-30A | 14 | EC11993 | PWB UNIT 5 USA |
| EC-30A | 15 | EC11517 | MOTOR UNIT |
| EC-30A | 16 | EC11817 | SOLENOID YOKE 5-B |
| EC-30A | 18 | EC11810 | SOLENOID 3-USA |
| EC-30A | 20 | EC12904 | TP SENSOR PLATE 3C |
| EC-30A | 22 | EC11444 | DETENT SPRING 3 |
| EC-30A | 23 | AA02517 | +PAN HEAD SCREW 4X5 CF |
| EC-30A | 24 | JJ10502 | E-RING 4 |
| EC-30A | 25 | JJ15504 | E-RING 4-1 |
| EC-30A | 26 | EC11460 | SUB FRAME SHAFT 3 |
| EC-30A | 27 | EC81003 | MAIN FRAME UNIT 3B |
| EC-30A | 28 | JJ10501 | E-RING 3 |
| EC-30A | 29 | EC12051 | PRINTING ROLLER 31 USA |
| EC-30A | 30 | EC11900 | PRINTING RIVET 3B |
| EC-30A | 31 | EC11434 | PF CAM FOLLOWER 3 UNIT |
| EC-30A | 32 | EC11896 | PAPER SET LEVER 3B |
| EC-30A | 33 | KK13180 | TENSION SPRING 3180 |
| EC-30A | 42 | EC11822 | PF ROLLER BRACKET(A)5-B |
| EC-30A | 43 | AA21581 | SCREW 4X6 |
| EC-30A | 44 | EC10903 | PF ROLLER BRACKET B |
| EC-30A | 46 | EC11825 | PRINTING BASE PLATE 5-B |
| EC-30A | 47 | EC11918 | PRINTING BASE UNIT 3B |
| EC-30A | 48 | EC12046 | DIAL 3B-USA UNIT |
| EC-30A | 49 | EC11854 | CONTROL GEAR 5-B |
| EC-30A | 50 | EC11858 | CONTROL SPRING 5-B |
| EC-30A | 51 | EC11935 | MID GEAR 3B |
| EC-30A | 52 | EC11472 | MID GEAR 3A |
| EC-30A | 53 | EC11893 | PRINTING GEAR CUM UNIT 3B |
| EC-30A | 54 | AA05543 | PAN HEAD SCREW 2.6X3 FT |
| EC-30A | 55 | EC11891 | SUB FRAME R-3B |
| EC-30A | 56 | EC11999 | DIAL STOPPER UNIT 3B |
| EC-30A | 57 | KK13167 | TENSION SPRING 3167 |
| EC-30A | 59 | EC11819 | CP SENSOR PLATE 5B |
| EC-30A | 60 | EC12904 | TP SENSOR PLATE 3C |
| EC-30A | 61 | EC70021 | MAIN PWB 3B-USA UNIT |
| EC-30A | 62 | EC12855 | MIDDLE TABLE 3-OS |
| EC-30A | 63 | EC11465 | WINDOW 3D |
| EC-30A | 65 | EC12854 | UPPER CASE 30A |
| EC-30A | 66 | EC12853 | INKROLL COVER 3-OS |
| EC-30A | 67 | EC11912 | KB RUBBER 3B |
| EC-30A | 68 | EC80008 | KB PWB 30A USA ASSY. |
| EC-30A | 69 | AA05101 | TAP TIGHT M4X8 |
| EC-30A | 71 | EC12891 | LOWER CASE |
| EC-30A | 72 | YZ30001 | CUSHION SJ-5012 BLACK |
| EC-30A | 75 | YC10101 | WIRE CONNECTOR 71B |
| EC-30A | 77 | YU30202 | FUSE 5MF |
| EC-30A | 100 | EC11923 | ADJUST KNOB 3B UNIT |
| EC-30A | 101 | EC11922 | ADJUST PLATE 3-B |
| EC-30A | 102 | EC11921 | BLACKET C-3B |
| EC-30A | 103 | EC81005 | PF ROLLER (A) UNIT 3B |
| EC-30A | 104 | EC11917 | PRINTING BASE SPRING 3B |
| EC-30A | 105 | EC11920 | PAPER PLATE 3-B |
| EC-30A | 109 | EC11934 | PF ROLLER HOLDER |